EN

No film output on this page

EXPORTADOR
Thomson multimedia Inc.
10330 N. Meridian St. Indianapolis, IN 46290
© 2002 Thomson multimedia Inc.
Trademark(s) ® Registered
Marca(s) Registrada(s)
Marque(s) ® Déposée(s)
55287630 (EN/F/E)
www.rca.com
www.rca.com/LatinAmerica
Made in China/Fabricado en China

IMPORTADOR
Comercializadora Thomson de México, S.A. de C.V.
Miguel de Cervantes Saavedra 57
Col. Ampliación Granada
C.P. 11529 Mexico D.F.
Telefono: (55)25 81 53 20
RFC: CTM-980723-KS5

0151

RCA

user manual

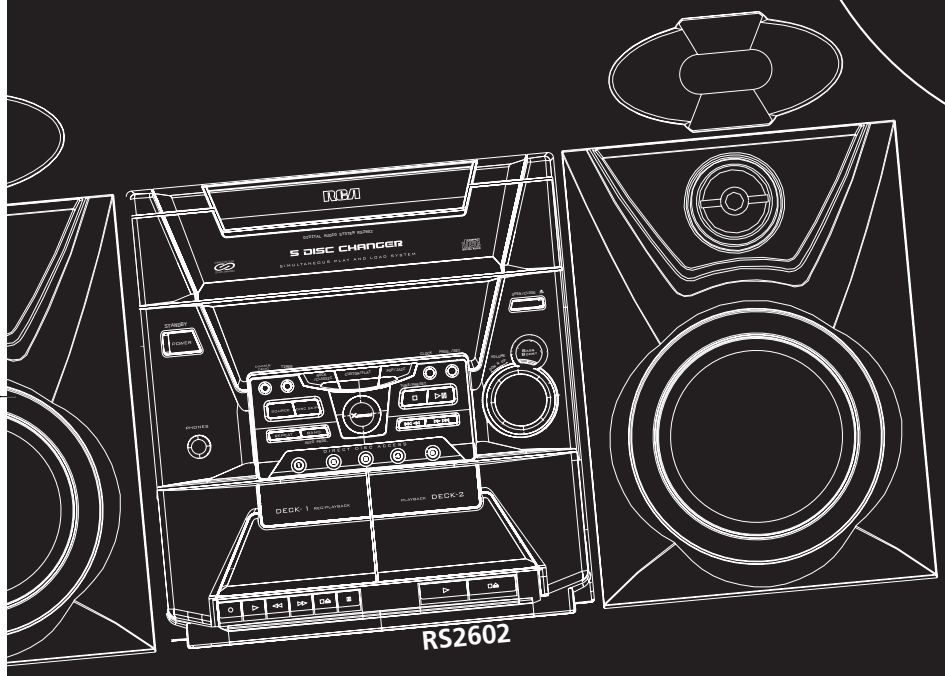

RS2601 / RS2602 / RS2603

It is important to read this instruction book prior to using your new product for the first time.
Es importante leer este manual antes de usar por vez primera su euipo.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia Inc. could void the user's authority to operate this product.
This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.
If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.
This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

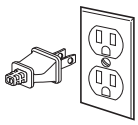

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Have a Blast- Just Not in Your Eardrums
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

FCC Information

EN

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:
Model No.
Remote Control No.
Date of Purchase
Place of Purchase
Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Technical specification

Power Supply: 120V~60Hz
Power consumption: 230 Watts

IMPORTER
Comercializadora Thomson de México, S.A. de C.V.
Miguel de Cervantes Saavedra 57
Col. Ampliación Granada
C.P. 11529 Mexico D.F.
Telefono: (55)25 81 53 20
RFC: CTM-980723-KS5

CONTENTS

FCC/ Safety Information

Getting started 3

General controls
- Main Unit 4
- Tape Player 4
- Remote Control 5

Display settings
- Showing the Demonstration 6
- Display Timer/Clock 6
- Setting the Time 6
- Setting the Timer 6
- Activating the Timer 6
- Adjusting the Display Brightness 6
- Sleep Mode 6

Sound Features
- Using Preset Equalizer Curves 7
- Creating a Custom Curve 7
- B Boost 7
- Muting Audio 7

CD Player
- Loading Discs 7
- Playing Discs 7
- Shuffling the Play Order . . .7
- Sampling Tracks 7
- Repeating the Play Order . .8
- CD display 8
- Setting Up a CD program . .8
- Playing a Program List 8
- Displaying the Program list 8
- Deleting a Program List 8
- Skipping a Disc 8
- Searching through a CD . . .8

Radio
- Tuning to a Station 9
- Using Presets 9
- Auto Preset Program (for FM only) 9
- Setting Presets 9
- Suppressing Stereo Signal 9

Tape Player
- Playing a Tape 10
- Continuous Play 10
- Recording 10
  - From Tuner 10
  - From CD 10
  - Tape to Tape 10
  - From an Auxiliary Input .10

Troubleshooting Tips 11

Important Information 12

Limited Warranty 14

Getting Started

EN

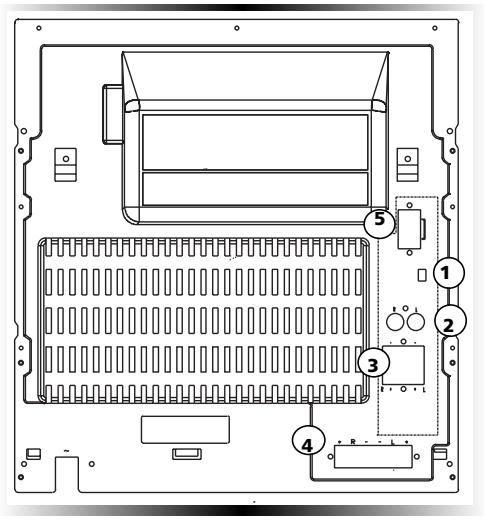

1. AM Loop Antenna Connector
2. Auxiliary Connector
3. Surround Speaker Jacks
4. Main Speaker Jacks
5. FM Antenna Jacks

Unpacking the system:
You should have:
- one main unit (with 2 speakers);
- surround speakers (RS2602 only);
- one remote control;
- one AM loop antenna;
- T-Type FM antenna wire;
- one user's guide;
- one safety leaflet.
- owner registration card

To ensure sufficient ventilation, keep the spacings shown below free from other surfaces:

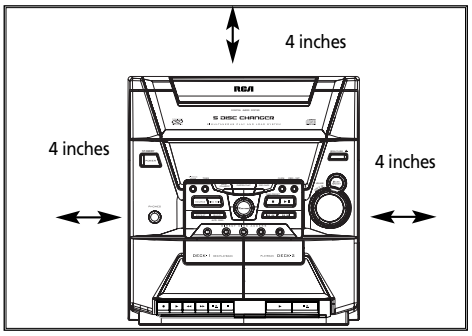

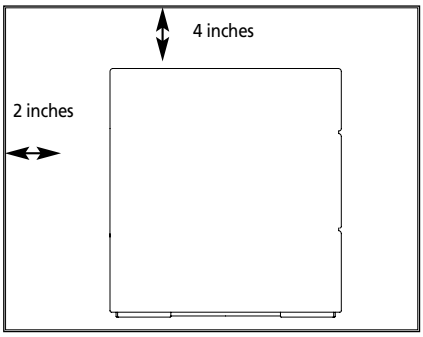

Antenna and Speaker Wire Connection

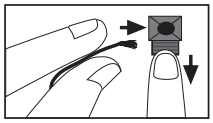

Push terminal tab down to insert wire.

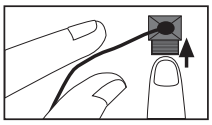

Release tab to lock wire in the terminal.

NOTE: Make sure the insulation is completely removed from the ends of the Antenna and speaker wires at all connection points.

General Controls

EN

Main Unit

OPEN/CLOSE — Opens or closes the disc tray.
DISC 1 - DISC 5 — Selects disc 1, 2, 3, 4, or 5 and starts playback automatically.
DISC SKIP — Skips to the next CD in the tray

STANDBY/POWER — Turns power on or off (STANDBY mode).
PHONES — Jack for connecting headphones
SOURCE— Selects the CD player/ tuner/ tape player/ external source
DIMMER/DEMO — Turns the feature demonstration on or off, adjusts display brightness.

STOP / TUNE / PRESET— Stops CD track, Sets tune or preset mode

SKIP FORWARD — Increments radio frequency, CD tracks or setting options.

SKIP BACKWARD — Decrements radio frequency, CD tracks or setting options

PLAY/PAUSE — Plays or pauses CD

CLOCK — Shows clock time and enters clock setting mode.
TIMER — Enters timer setting mode and turns the mode on/off.
BAND/AUTO PROG. — Changes between FM and AM tuner bands. Enters autopreset program in FM mode.
REPEAT - Selects among repeat modes.
PROG./SET - Enters program or setting mode for CD and tuner mode.
B BOOST — Turns B BOOST on or off

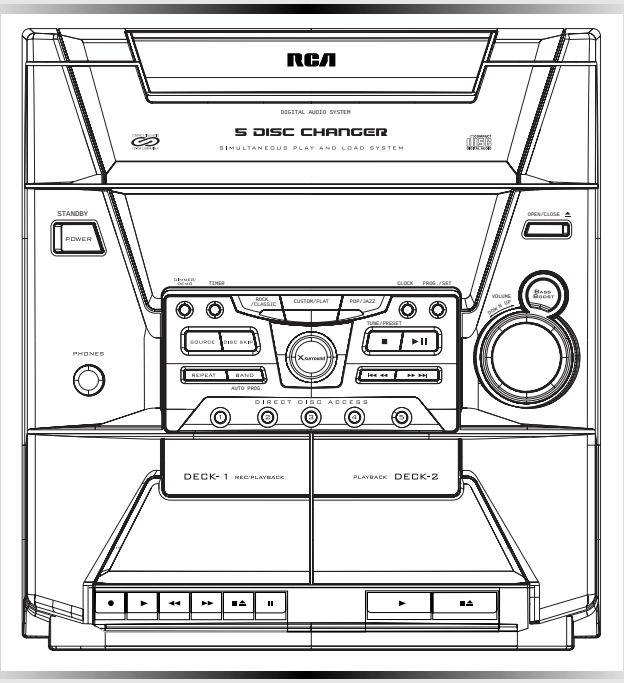

ROCK/CLASSIC, CUSTOM/FLAT, POP/JAZZ — selects among the different EQ modes.
X-SURROUND — Press once to activate X-SURROUND.
VOLUME — Increases/ decreases volume.

Tape Player

- ● RECORD
- ▶ PLAY
- ◀◀ REWIND
- ▶▶ FAST-FORWARD
- ■⏏ STOP/EJECT
- ❚❚ PAUSE

Tip: In **STANDBY** mode (press **POWER** off), the system displays the time. Press **POWER** to turn the system on in the previously used mode. Press **CD**, **TAPE**, **TUNER**, or **AUX (Remote Only)** to select the corresponding mode. Look at the display icons to identify the current mode.

General Controls

EN

Remote Control

POWER — Turns power on or off (**STANDBY** mode).
TUNER — Selects tuner
CD — Selects CD player
TAPE — Selects tape player
AUX — Selects external input.
B-BOOST - Turns B BOOST on or off
VOL+ or VOL- — Increases/ decreases volume
EQ — Selects equalizer presets
PLAY/PAUSE ▶II — Plays or pauses current CD
STOP — Stops playing CD
NEXT/FWD ▶▶I — Increments CD track; searches through CD
PREV/REV— I◀◀ Decrements CD track; searches through CD
(Press **NEXT/FWD or PREV/REV** to tune up/ down tuner frequency)
DISC SKIP — Skips to next CD
REPEAT — Repeats a track, CD, or all CDs.
MUTE - mutes sound
SHUFFLE — Turns on/off random listening
FM ST. - Toggles between FM stereo and mono
INTRO - Turns INTRO mode on or off to play the first 10 seconds of each track.
PRESET UP/DOWN — Selects next/ previous preset station
OPEN/CLOSE — opens/closes cd tray door
SLEEP - selects the time interval in minutes before the unit turns off
X-SURROUND - enables/disables X-surround feature

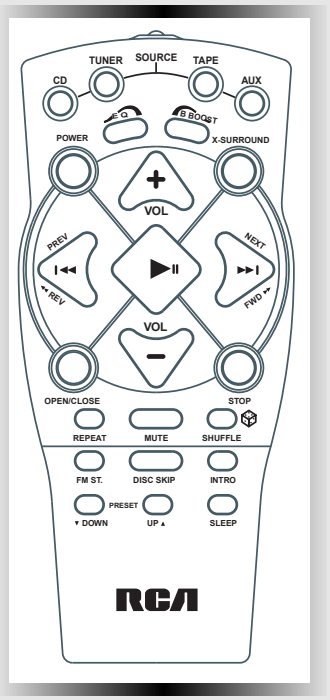

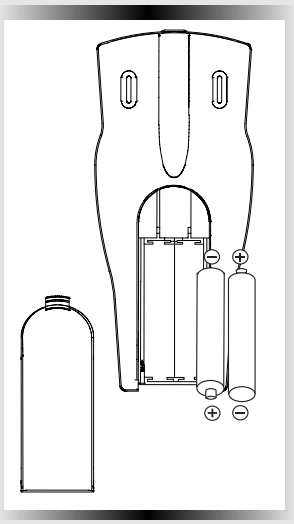

Battery Size:
"AAA" or "UM-4" or "R03"

Display Settings

EN

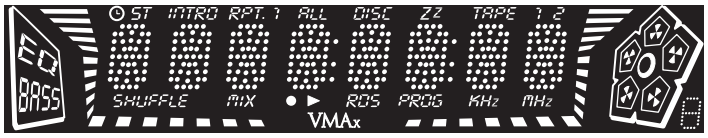

Showing the Demonstration

Not operational in CD mode. Press ***DIMMER/DEMO*** to turn on/off demonstration mode. The demonstration scrolls through all display operations.

DISPLAY TIMER/CLOCK

Setting the Time

1. Press and hold **CLOCK** until the hour flashes on the display.
2. Press **SKIP BACKWARD** ⏮ ◀◀ or **SKIP FORWARD** ▶▶ ⏭ to set the hour and then press **CLOCK** to shift to minute digits**.**
3. Press **SKIP BACKWARD** ⏮ ◀◀ or **SKIP FORWARD** ▶▶ ⏭ to set the minute.
4. Press **SET** to save settings and **STOP** to quit setting.

Note: When system is ON, you can press **CLOCK** to display the current time for about 2 seconds.

Setting the Timer

1. Press and hold **TIMER** until the **ON** appear with the hour flashing (**ON** - timer on time)
2. For setting time, press **SKIP FORWARD** ▶▶ ⏭ **/ BACKWARD** ⏮ ◀◀ to set the hour and then press **TIMER** to shift to minute digits**.**
3. Press **SKIP FORWARD** ▶▶ ⏭ **/ BACKWARD** ⏮ ◀◀ to set the minute.
4. Press **TIMER** to change to **OF** (timer off time) with hour flashing. Repeat steps 2 & 3 for timer off time setting.
5. Press **TIMER** to select source. Press **SKIP FORWARD** ▶▶ ⏭ **/ BACKWARD** ⏮ ◀◀ to select between CD /TUNER / TAPE)
6. Press **TIMER** to set volume. Rotate the VOLUME knob to set desired volume level.
7. Press **SET** to save settings or **STOP** to quit setting.

Activating the Timer

Press and release **TIMER** to turn on/off the alarm. The alarm is active when the clock icon indicator is lit.

Adjusting the Display Brightness

1. Press and hold **DIMMER/DEMO** for more than 2 seconds.
2. While the dimmer is displayed, press and release **DIMMER/DEMO** to select the desired level (**DIMM 0 - 3**).

DIMM 2

Sleep Mode

You can select the time interval in minutes before the unit turns off automatically. Press **SLEEP** on the remote to select among 120, 90, 60, 45, 30, 15 & 5 minutes. (Remote Only)

Sound Features

EN

Using Preset Equalizer Curves

Press ROCK/CLASSIC, CUSTOM/FLAT, POP/JAZZ on the main unit or EQ on the remote to toggle among FLAT, ROCK, JAZZ, POP, CLASSICAL & CUSTOM. The display shows briefly the selection.

Creating a Custom Curve

1. Press **CUSTOM/FLAT** to select **CUSTOM** mode.
2. While "**CUSTOM**" is displayed, press **SKIP FORWARD** ▶▶ ▶▶I/ **BACKWARD** I◀◀ ◀◀ to cycle among displayed bass- and treble - range levels.

TRE+08

3. While **BAS**, or **TRE** is displayed, adjust **VOLUME** to set the associated gain between -10 - +10.

Bass Boost

Press **BASS BOOST** to turn on/off boosting the bass frequency.

Muting Audio

MUTE

Press **MUTE** on the remote to cut the sound. (Remote Only)

X-Surround

Press **X-SURROUND** to enjoy enriched sound quality. This feature gives you:
1. Better width and depth for vocal and instrumental sound.
2. More powerful presence for studio recording.
3. Enhanced surround effects with greater flexibility in positioning speakers.

CD Player

Loading Discs

1. Press **SOURCE** repeatedly to select **CD** mode.
2. Press **OPEN/CLOSE** to open the drawer.
3. Insert up to five discs with label face up. (Press **DISC SKIP** to rotate the disc carrier.)
4. Press **OPEN/CLOSE** to close the drawer. Loaded disc position icon lights.

Playing Discs

Press **PLAY/PAUSE** ▶II to begin or pause playing, and **STOP** ■ to stop playing.
Select a specific disc by pressing **DISC 1 - DISC 5**.
Press **SKIP FORWARD** ▶▶ ▶▶I **BACKWARD** I◀◀ ◀◀ to select a specific track.

Play and load simultaneously by:

1. Press **OPEN/CLOSE** to open the tray while a CD is playing
2. Load/change discs for available trays by pressing **DISC SKIP**.
3. Press **OPEN/CLOSE** to close the tray.

Shuffling the Play Order

Press **SHUFFLE** to turn on/off the playing of tracks in random order. (Remote Only)

Sampling Tracks

Press **INTRO** to play the first 10 seconds of each track on the current disc, all discs in the tray, or turn **INTRO** mode off. (Remote Only)

(Note: You may also press **REPEAT** to select 1 disc or all discs before activating **INTRO** & **SHUFFLE** functions)

CD Player

EN

Repeating the Play Order

Press **REPEAT** to repeat the current track, current disc, all discs, or turn **REPEAT** mode off.

CD Display

Press **CD** to select among different display options: Track remaining time/ Track elapsed time or Disc remaining time(remote only).

Setting Up a CD Program

You can program the CD player to play up to any 32 tracks on the CDs in the tray.

1. While the CD player is stopped, press **PROG/SET** to enter program mode. The system displays the next available program number: "- - P:01," with "- -" flashing, prompts you for the first track in the program list.

2. Press **SKIP FORWARD** ⏭ / **BACKWARD** ⏮ to select a track (press **DISC SKIP** or **DISC 1 - DISC 5** to select a track from a different disc).
3. Immediately press **PROG/SET** to assign the selected track to the program number. After 3 seconds, you are prompted for the next track in the program list. (In CD program mode, **PROG** icon will be lit.)

Playing a Program List

While in **PROGRAM** mode, press **PLAY/PAUSE** ►.

Displaying the Program List

1. While the CD player is stopped, press **PROG/SET** to enter **PROGRAM** mode.
2. Press **PROG/SET** repeatedly to list each track assignment in the program list.

Deleting Program List

While in **PROGRAM** mode, press and hold **STOP** ■ for 5 seconds. They system displays the message **CLEAR**.

Skipping a Disc

Press **DISC SKIP**.

Searching Through a CD

Press and hold **SKIP FORWARD** ⏭ / **BACKWARD** ⏮ to search through a CD as it is playing.

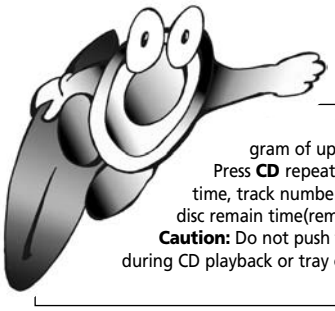

Tips: You can create a program of up to 32 tracks.
Press **CD** repeatedly to view elapsed track time, track number, track remain time and disc remain time(remote only).
Caution: Do not push to force closing of the tray during CD playback or tray opening.

Radio

EN

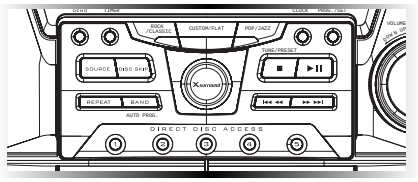

1. Press **SOURCE** to select **TUNER**.
2. Press **BAND** to select between AM or FM radio band.

Tip: Your audio system has 32 preset stations.

Tuning to a Station

Press **SKIP FORWARD** ⏭ / **BACKWARD** ⏮ to select frequencies.

Using Presets

87.50 MHz

The tuner can be in either TUNE or PRESET mode.
When in PRESET mode, the PROG light is on.
Press **SKIP BACKWARD** ⏮ or **SKIP FORWARD** ⏭ on the main system or **PRESET UP or DOWN** on the remote control to access the previous or next preset station. The display first shows the preset program number and after a few seconds, the frequency and preset program number will be displayed. (FMPR:01 is FM preset 1)

Auto Preset Programming (for FM only)

PR:01

Press and hold **BAND** button for 2 seconds to scan stations in FM band. The stations will then be stored as preset channels. A maximum 32 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. You can stop the automatic scan by pressing any button, but the erased stations cannot be recovered.

Setting Presets

1. Press **TUNE/PRESET** button to enter **TUNE** mode.
2. Press **SKIP FORWARD** ⏭ / **BACKWARD** ⏮ to access the desired frequency.
3. Press the **PROG/SET** button once.
4. The most recently accessed program location will be displayed.
5. If a different program location is preferred, press **SKIP BACKWARD** ⏮ / **FORWARD** ⏭ to move to the desired preset number (1-32).
6. Press **PROG/SET** to store the selected frequency at that preset.

Suppressing Stereo Signal

Press **FM ST** to toggle between FM mono and stereo for stereo FM stations. (Remote Only)

Tape player

EN

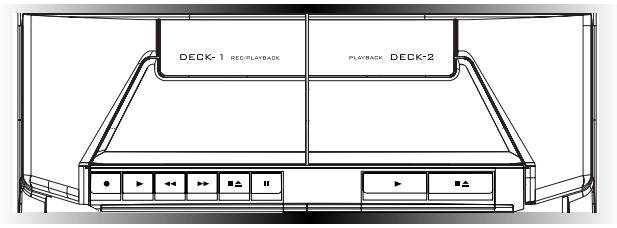

Playing a Tape

Tip: You can play a tape from either deck.

1. Press **SOURCE** repeatedly to select **TAPE**.
2. Open the cassette door.
3. Insert a tape into the door and push the door closed.
4. Press **REW** ◀◀ **/F.FWD** ▶▶ to position the tape to the desired starting position. (Deck 1 Only)
5. Press **PLAY** to start playback .

Continuous Play

1. Insert a tape into deck 2 and start playback.
2. Insert a tape into deck 1 and press **PLAY** and **PAUSE** together.
3. When the tape in deck 2 finishes playback, PAUSE at deck 1 will be released automatically and start playback.

Recording

From Tuner

1. Insert a tape into deck 1.
2. Press **SOURCE** repeatedly to select **TUNER** and press **BAND** to access the desired radio band.
3. Tune to the station to be recorded.
4. Press **RECORD** ● to begin recording.
5. Press **STOP/EJECT** ■ ⏏ to end recording.

From CD

1. Insert a tape into deck 1.
2. Press **SOURCE** repeatedly to select **CD**.
3. Insert the disc(s) to be recorded.
4. Select the track, CD, or program to be recorded.
5. Press **RECORD** ● to begin recording.
6. CD begins to play.
7. Press **STOP/EJECT** ■ ⏏ to end recording.

Tape to Tape

1. Insert the destination tape in deck 1.
2. Insert the source tape into deck 2.
3. Press **PAUSE** and then **RECORD** ● on deck 1.
4. Press **PLAY** **on** deck 2. The playback and recording start simultaneously.

From an Auxiliary Input

1. Insert the cassette in deck 1.
2. Check that the auxiliary device has been connected correctly to the **AUX** connector on the back of the audio system.
3. Start playback on the auxiliary device.
4. Press **RECORD** ● on deck 1 to begin recording.
5.. Press **STOP/EJECT** ■ ⏏ to end recording.

Troubleshooting Tips

EN

Problem	Solution
System will not turn on	• Check power cord for a secure connection. • Unplug the unit for a moment, and then plug into power source again. • Check the outlet by plugging in another device.
No sound	• Increase the volume setting. • Check connection to speakers. • Check that you have selected the appropriate function: CD, TAPE, Tuner. • Make sure mute is off.
Poor radio reception	• Check antenna connection. • Move antenna. • Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights.
CD does not play	• Check that CD is in the tray. • Check that CD label is facing up. • Check that PAUSE mode is not on. • Check that CD function is selected. • Use CD lens cleaner. • Clean the disc.
CD sound skips	• Clean the disc. • Check disc for warping, scratches, or other damage. • Check if something is causing the system to vibrate. If so, move the system. • Make sure the speakers are at least 3 feet away or on a different surface from the main unit.
CD button will not respond, or does not change discs when you press DISC SKIP	• Switch to another function (TAPE, Tuner) and then back to CD.
Distorted or noisy tape recordings	• Inspect the tape heads, clean it if neccessary.
Remote control does not work	• Check that the batteries are properly installed. • Replace weak batteries. • Check the system is plugged into power source. • Point the remote directly at the system's front panel. • Move closer to the system. • Remove any obstacles between the remote and the system.

Important Information

EN

Disconnect the audio system from the power source before performing any maintenance.

Cleaning

Clean the exterior of the system using a soft dust cloth.

CD Player

CAUTION! This system operates with a laser. It must be opened by only a qualified technician.

Tape Player

To prevent deterioration of sound quality, periodically open the door of each deck and clean the magnetic heads, pinch roller, and capstan with a cotton bud dipped in alcohol. Also, demagnetize the head by playing a demagnetizing cassette (available through an audio equipment store).

To protect recordings one or both sides of a tape, remove the corresponding tab. If you later want to record on the tape, affix a piece of adhesive tape over the hole.



Quit Slacking - A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.

Safety Precautions

• Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
• Never operate this product with the cabinet removed.
•Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
• Keep your unit away from humid areas and abnormally hot places.
• Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
• This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
• Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
• Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
• The apparatus shall not be exposed to dripping and splashing.

Important Battery Information

• Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
• Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
• Any battery may leak electrolyte under the following circumstances:
- if mixed with a different battery type,
- if inserted incorrectly,
- if all batteries are not replaced at the same time,
- if disposed of in fire, or
- if an attempt is made to charge a battery not intended to be recharged.

Important Information

EN

Headset Safety

• Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
• If you experience ringing in your ears, reduce volume or discontinue use.
• You should use with extreme caution or temporarily discontinue use in potentially hazardous situations.
Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

Handling CDs

• Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs

Cleaning CDs

• Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
• If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
• Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface

CD Lens Care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for which it is not intended is unlawful and therefore not condoned by Thomson multimedia.

Technical Specification

Power supply: 120V~60Hz
Dimensions (H x W x D inches):
Unit size - 13 x 12 x 16 inches
Speaker - 13 x 9.4 x 8.4 inches
Surround Speaker(RS2602 only)-3.4 x 6.9 x 2.7 inches
Tape deck: Response curve: 125Hz-8kHz (-5dB)
CD player: Response curve (+/- 2dB): 60Hz to 20 kHz
Rating Plate: Look for it at the back of the set.

Limited Warranty (U.S.)

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts
- Warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside the U.S.A.
- Acts of nature, such as but not limited to lightning damage.

Limited Warranty (U.S.)

EN

Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How State Law relates to warranty:

• Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
• This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States:

• This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Limited Warranty (Canada)

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside Canada.
- Acts of nature, such as but not limited to lightning damage.

Limited Warranty (Canada)

EN

Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA LTD., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA LTD. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE PROVINCIAL LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How Provincial Laws relates to warranty:

• This warranty gives you specific legal rights which are in addition to statutory warranties that may vary from Province to Province.

If you purchased your unit outside Canada:

• This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Garantía Limitada (Para México)

RCA

Centro de Servicios Autorizados Express (servicio en 24 horas)

México, D.F.
Digital Service
Av. 3 A No. 12, Local 2
Col. Santa Rosa
México, D.F.
Tel 01 53889621
55877599
55878971
55673972

Monterrey. N.L.
Audio Estéreo Aguilar
Gral. Zuazua 738 Nte.
Col. Centro
Monterrey. N.L.
Tel 01 (8) 3724989
3755440
3755884

Guadalajara, Jal.
Servicio Especializado de Jalisco
Enrique Díaz de Leon No. 821
Col. Sagrada Familia
Guadalajara, Jal.
Tel 01 (3) 1267431
1267430
8253229
82582

AGUASCALIENTES
Electrónica JIMSA
Av. Adolfo López Mateos No. 230 ote.
Col. Centro
Aguascalientes, Ags. C.P.
Tel. (01-49) 15 51 81 / 78 07 57
Fax. (01-49) 15 81 00

BAJA CALIFORNIA NORTE
Electrónica General Internac
Blvd. Insurgentes No. 16174, Loc. 2AC.
Plaza de Abastos Los Almos
Tijuana, BCN C.P. 22440
Tel. (01-66) 21 22 15
Tel. / Fax: (01-66) 21 22 15

Baja Electronics
Hacienda de Corralejo No. 2099
Col. Hidalgo
Mexicali, B.C.N. C.P. 21389
Tel. (01-65) 619818, 619808
Fax.(01-65) 619808, 619818

Serv. Electrónico Ensenada
Calle 4ta No. 1050, Local B
Col. Centro.
Ensenada, B.C.N. C.P. 22800
Tel. (01-61) 740 0532
Fax.(01-61) 788356

BAJA CALIFORNIA SUR
Digital Sound
16 de Septiembre No. 390
Col. Centro
La Paz, Baja California Sur
Tel. (112) 32017
Fax. (112) 32017

Video Servicio Beluz
Carretra a todos Santos No. 32
Col. Infonavit Las Brisas.
Los Cabos san Lucas, BCS C.P. 23410
Tels. (01-114) 313 65
Fax. (01-114) 313 65

CAMPECHE
Videoservicio
Av. López Matees No. 24
Col. Barrio Sn. Roman, C.P. 24040
Campeche, Camp.
Tel. (01-981) 6-3333
Fax. (01-981) 1-0664

CHIAPAS
KC Vídeo
10a. Norte Oriente No. 153A
Col. Centro
Tuxtla Gutiérrez, Chis. C.P. 29000
Tel. (01-961) 8 19 08; 8 36 43
Fax. (01-961) 8 19 08

Serv. Elec. Especializado
Cuahutemoc No. 2A
Col. Centro, C.P. 29200
San. Cristóbal de las Casas, Chis.
Tel/Fax. (01-967)8-1355
Fax. (01-967)8-1355

Ele Aplicada Serv Digitales
4a. Av., Sur No. 51
Col. Centro, C.P. 30700
Tapachula, Chis.
Tel. (01-962)6-9998
Fax. (01-962)5-4578

CHIHUAHUA
Zener Electrónica
Trasviña y Retes No. 3503A
Col. Sn. Felipe
Chihuahua, Chih. C.P. 31240
Tels. (01-14) 14 01 16; 26 50 41
Tel. / Fax: (01-14) 26 50 41

Magnavox
Tlaxcala 1161
Col. Hidalgo
Cd. Juarez, Chihuahua. C.P. 32010
Tel. (01-16)12 40 31
Fax: (01-16)12 40 31

Electronica Tony
Priv. De la calle 6ta oriente No. 7
Col. Centro
Cd. Delicias, Chihuahua
Tel. (01-14) 74 30 26
Fax. (01-14) 74 30 26

Taller Electrónico Tony
20 de Noviembre No. 1521
Col. Centro.
Cd. Camargo, Chihuahua. C.P.
Tel. (146) 234 67
Fax. (146) 234 67

COAHUILA
Electrónica Profesional
Blvrd. Francisco Coss No. 450-1
Col. Centro
Saltillo, Coah C.P. 25000
Tels. (01-84) 10 03 00
Tel. / Fax: (01-84) 12 30 44

Audio y Video Electronica
Miguel Blanco 307-A
Col Zona Centro.
Monclova, Coahuila. C.P. 25700
Tel. (01-86) 33 94 06
Fax.(01-86) 33 94 06

Electro Visión
Juan Aldama No. 6 y Presid. Carranza
Col. Centro
Nueva Rosita, Coahuila. C.P.
Tel. (86) 14 58 44
Fax. (86) 14 58 44

Electronica Rico
Iturbide y Manuel Acuña
Col. Centro.
Cd. Acuña, Coahuila. C.P. 26250
Tel. (877) 236 23

Garantía Limitada (Para México)

Vacom
Av. Morelos 1016 ote.
Col. Centro
Torreón, Coah. C.P. 27000
Tel. (01-17) 18 39 05, 22 15 51
Fax. (01-17) 18 11 98

Electro Vision
Allende No. 114 esq. Xicotencatl
Zona Centro
Piedras Negras, Coahuila. C.P.
Tel. (878) 21875
Fax. (878) 21875

Multiservicios del Norte
5 de Mayo 295sur.
Col. Centro
Sabinas, Coahuila. C.P. 26700
Tel. (861) 264 31
Fax. (861) 264 31

COLIMA
Elec. Saturno de Colima
Nigromante No. 138
Col. Centro
Colima, Col. C.P. 28000
Tel. (01-331) 4 55 54, 4 50 00
Tel. / Fax: (01-331) 4 55 54

Lab. Elect. De la Mora
Allende No. 110
Col. Centro
Manzanillo, Col. C.P. 28200
Tel. (01-333) 2 30 04
Tel. / Fax: (01-333)

DISTRITO FEDERAL
SIMEL
Río Churubusco No. 2215
Col. Agrícola Oriental
México, D.F. C.P. 08500
Tel. 756 0883
Fax: 756 0883

Novatron.
Diag. San Antonio No. 1213
Col. Narvarte
México, D.F. C.P. 03020
Tel. 639 0812
Fax: 639 1184

Electrónica Rangel.
San Felipe No. 157
Col. Pedregal de Santa Ursula
México D.F. C.P. 04800
Tel. 619 3213
Fax: 619 4565

DURANGO
Macroservicios.
Calle Patoni No. 105 sur.
Col. Centro
Durango, Dgo.
Tel. (01-18) 12 26 86
Fax. (01-18) 12 26 86

ESTADO DE MEXICO
Electrónica Alcántara.
Reforma No. 36
Col. Centro
Chalco, Edo. de Mex. C.P. 56600
Tel. (01-597) 51 847
Fax: (01-597) 51 847

Ctro Serv. Electrónicos
L. Portillo, esq. Blvd. Coacalco
Col. Villa de las Flores
Coacalco, Edo. de Mex. C.P. 55710
Tels. 879 3404; 874 6006
Fax: 898 2464

SHUREE Electrónica
Av. De los Maestros No. 113A
Col. Centro, C.P. 50060
Toluca, EDM.
Tel. (01-72)14-9330,
Fax. (01-72)13-3424

TV Servideo
Oriente 9 No. 182
Col. Reforma
Cd. Neza, Edo. De Mex. C.P. 57840
Tel. 5857 2547
Fax. 5857 6399

Servicio Sony Visión
Prensa No. 1253
Col. Prensa Nal. Ind. Vallejo.
Tlanepantla, E.D.M. C.P. 54170
Tel. 587 75 99
Fax: 587 89 71

GUANAJUATO
Tecnología Electrónica
Blvd. Adolfo López Mateos No. 2834A
Col. Haciendas El Rosario
León, Gto. C.P. 37130
Tel: (01 4) 773 6634
Fax. (01 4) 773 6634

Mar Electronic's
Brisas No. 999
Col. Las Reinas, C.P. 36660
Irapuato, Gto.
Tel. (01-462)4-7140
Fax. (01-462)4-7140

Tele Servicio Chucho.
Blv Adolfo López Mateos No 510 Pte
Col. Centro, C.P. 38000
Celaya, Gto.
Tel. (01-461) 2-4714,
Fax.(01-461)3-0591

Tele Radio Ortega.
Av. 16 de Septiembre No. 1076
Col. Centro, C.P. 38600
Acambaro, Gto.
Tel. (01-417)2-0780
Fax. (01-417)2-0780

Garantía Limitada (Para México)

GUERRERO
Nueva Elec. Auditron
Aquiles Serdan No. 14B
Col. Centro
Acapulco, Gro. C.P. 039300
Tels. (01-74) 82 62 42
Tel. / Fax: (01-74) 83 20 62

HIDALGO
Tec. Electrónica Digital
Blvd. Valle de San. Javier No. 308
Col. Fracc. Valle de San. Javier
Pachuca, Hgo. C.P. 42086
Tel. (01-771) 3 24 36
Tel. / Fax: (01-771) 3 24 36

Electrónica Especializada
Independencia No. 102 Loc. C
Col. Centro, C.P. 43600
Tulancingo, Hgo,
Tel. (01-775)5-2654 3-9120
Fax. (01-775)5-2654 3-9120

JALISCO
Serv. Esp. De Jalisco
Ignacio Ramirez No. 567
S.H. Sta. Teresita
Guadalajara, Jal. C.P. 44200
Tels. (01-3) 825-3229, 827-0721
Tel. / Fax: (01-3) 825-3229

Electrónica Integral
Candelaria No. 202, Esq. Analco
Col. Sta. María
Puerto Vallarta, Jal. C.P. 48348
Tels. (01-322) 4 37 36
Tel. / Fax: (01-322) 4 85 90

Setesa
5 de Febrero No. 2786
Col. Rancho Blanco
Tlaquepaque, Jalisco. C.P. 44890
Tel. (01-3) 635-4404, 635-1875
Fax. (01-3) 635-4404, 635-1875

MICHOACAN
Alka Electrónica
García de León No. 271
Col. Chapultepec Sur.
Morelia, Mich. C.P. 58260
Tels. (01-43) 14 55 21; 15 90 36
Tel. / Fax: (01-43) 15 94 25

Centro Electrónico Sony
Justo Mendoza No. 12
Col. Centro
Uruapan, Mich. C.P. 60000
Tels. (01-452) 4 37 78; 4 08 38
Tel. / Fax: (01-452) 4 59 09

Multiserv Prof. Zamora
5 de Mayo No. 699A
Col. El Duero
Zamora, Mich. C.P. 59690
Tel. (01-351) 5 54 16
Tel. / Fax: (01-351) 5 54 16

MORELOS
Electrónica Hertz
Insurgentes No. 190
Col. Emiliano Zapata
Cuautla, Mor. C.P. 62744
Tel. (01-735) 3 84 10
Fax. (01-735) 3 84 10

Electrónica Hertz
Libertad No. 108
Col. La Carolina
Cuernavaca, Mor. C.P. 62190
Tel. (01-73) 13 90 92
Fax. (01-73) 13 09 49

NUEVO LEÓN
Audio Estereo Aguilar
Gral. Zuazua 738 Nte.
Col. Centro
Monterrey, Nvo. León. CP. 64000
Tels. (01-8)372-4989 / 375-5440
Tel. / Fax: (01-8) 375-5884

Teleservicio Murillo
Allende No. 595 Sur.
Col. Centro
Cd. Linares, Nvo León. C.P. 67700
Tel. (01-821) 266 50
Fax. (01-821) 266 50

NAYARIT
Electrónica Show
San Luis No. 118 sur
Col. Centro
Tepic, Nay. C.P. 63000
Tel. (01-321) 4 58 00
Tel. / Fax: (01-321) 4 58 00

OAXACA
El Francistor
Húsares No. 207
Col. Centro
Oaxaca, Oax. C.P. 68000
Tel. (01-951) 6 47 37
Fax. (01-951) 472 97

PUEBLA
Serv. Express Electrónico
Prol. Reforma No. 6908A
Col. La Libertad
Puebla, Pue. C.P. 72130
Tels. (01-22) 49 78 19; 37 02 82
Tel. / Fax: (01-22) 31 32 93

QUERETARO
Blauton Industrial
Av. Universidad No. 44B
Col. Pathe
Querétaro, Qro. C.P. 76020
Tels. (01-42) 23 22 66; 23 49 34
Tel. / Fax: (01-42) 23 22 67

QUINTANA ROO
Electrónica Beta
Av. Sun Yax Chen No. 43 Loc. 4
Col. Centro
Cancun, Q. Roo. C.P. 77508
Tel. (01-98) 84 54 12
Fax. (01-98) 87 38 13

Electronicos y Mas
Ignacio Zaragoza No. 204-A
Col. Centro. C.P. 77000
Chetumal, Q. Roo
Tel. (983) 26663, 24622, 21562
Fax. (983) 26014

SAN LUIS POTOSI
Electronica Especializada
Manuel J. Clouthier No. 212C
Col. Las aguilas
San Luis Potosí, SLP. C.P. 78270
Tels. (01-48) 17 62 79
Tel. / Fax: (01-48) 14 19 02

Estereo Car
Negrete No. 612
Col. Centro
Cd. Valles, SLP. C.P. 79000
Tel. (01- 138) 206 51
Fax. (01- 138) 206 51

SINALOA
Serv. Electrónico del Pacifico
Mariano Escobedo No. 1022
Col. Centro
Mazatlán, Sin. C.P. 82000
Tel. (01-69) 82 01 55
Tel. / Fax: (01-69) 82 01 55

Reparaciones Electrónicas
J.Jose Ríos No. 178 ote.
Col. Centro.
Culiacan Sinaloa. C.P. 81200
Tel. (01-67) 16 81 32, 16 51 45
Fax.(01-67) 16 81 32, 16 51 45

Electrónica Morelos.
Morelos No. 201 ote
Col. Centro.
Los Mochis, Sinaloa. C.P. 81200
Tel. (01-68) 12 05 88
Fax. (01-68) 12 05 88

Garantía Limitada (Para México)

SONORA

Wong's Electrónicos
Monteverde No. 267 esq. Balderrama
Col. Balderrama
Hermosillo, Son. C.P. 83180
Tels. (01-62) 10 54 95; 10 05 86
Tel. / Fax: (01-62) 10 54 95

Dasetronik.
Guerrero No. 308-A este.
Col. Centro.
Navojoa, Sonora. C.P. 85800
Tel. (01-642) 240 64,
Fax. (01-642) 136 64

Audio video Electrónica
Av. Zaragoza No. 516 pte.
Col. Centro.
Cd. Obregon, Sonora. C.P. 23000
Tel. (01-64) 14 38 28
Fax. (14 75 75)

Electrónica Universal.
Calle 29 Av. Alfonso Idberry No. 401
Col. Centro
Cd. Guaymas, Sonora. C.P. 85400
Tel. (01-622) 29 411

Electronica Castillo
Noche Buena # 37
Col. El rastro
Nogales, Sonora. C.P. 84000
Tel. (16) 314 6857
Fax. (16) 312 3087

TABASCO

Elec. Sigma de Tabasco
Av. Gregorio Méndez No. 2819
Col. Atasta
Villahermosa, Tab. C.P. 86100
Tels. (01-93) 54 00 33; 54 20 30
Tel. / Fax: (01-93) 54 00 33

TAMAULIPAS

Electrónica Digital
Independencia No. 112 esq. 11
Col. Centro
Matamoros, Tamps. C.P. 88000
Tel. (01-88) 13 50 13
Tel. / Fax. (01-88) 13 50 13

Centro de Servicio Lugo
Rosalinada Guerrero No. 285
Col. Prol. Longoriiia
Reynosa, Tamps. C.P. 88699
Tel. (01- 89) 24 92 43
Tel. / Fax: (01-89) 24 92 43

Esp. Electrónicas
Matamoros poniente 225
Col. Centro
Cd. Victoria, Tamps. C.P. 87000
Tel. (01-131) 299 45
Fax. (01-131) 251 93

Micronics
Calle 10 No. 607.
Col. Jardin 20 de Noviembre
Madero, Tamps. C.P. 89440
Tels. (01-12) 15 96 89
Fax: (01-12) 10 38 82

Laboratorio Electrónico
Washington 3142
Col. Juarez (Centro)
Nuevo Laredo, Tamps. C.P. 88000
Tel. (01-87) 14 95 92, 14 98 52
Fax. (01-87) 14 71 71

Electronica Emmanuel
Obregon No. 205A
Zona Centro
Cd. Mante, Tamaulipas. C.P. 89800
Tel. (01-123) 290 81
Fax. (01-123) 290 81

VERACRUZ

Grupo Digital
I. Zaragoza No. 212
Col. Centro
Coatzacoalcos, Ver. C.P. 96400
Tel. (01-921) 2 02 29
Fax. (01-921) 2 02 29

Serv Técnicos Prof.
Av. 13 No. 400 Esq. Calle 4
Col. Bella Vista
Córdoba, Ver. C.P. 94500
Tel. (01-271) 2 73 22
Fax. (01-271) 2 25 39

Electrónica Arizona
Bustamante No. 46
Col. Centro
Jalapa, Ver. C.P. 91000
Tel. (01-28) 18 78 68
Fax. (01-28) 12 25 34

Com. y Electrónica
Miguel Hidalgo No. 103
Col. Buena Vista Sur
Minatitlan, Ver. C.P. 96730
Tel. (01-922) 3 15 65
Tel. / Fax: (01-922) 3 15 65

Electrónica Digital BORR
Av. Juárez No. 516
Col. 27 de Septiembre
Poza Rica, Ver. C.P. 93320
Tel. (01-782) 3 69 49
Fax. (01-782) 3 69 49

Electrónica DICA
F. del Paso y Troncoso No. 908
Col. Centro
Veracruz, Ver. C.P. 91700
Tels. (01-29) 31 20 33; 31 22 96
Tel. / Fax:(01-29) 31 2 33

Seguridad Plus.
Oriente 4 No. 187 Esq. Sur 5
Col. Centro, C.P.
Orizaba, Ver.
Tel. (01-272) 5-0235

YUCATAN

Cinescopios
Calle 70 No. 443, oc. 7 por 49
Col. Centro
Mérida, Yuc. C.P. 97000
Tels. (01-99) 28 54 28, 28 59 05
Tel. / Fax: (01-99) 28 59 05

ZACATECAS

Electronica Mario.
Morelos Poniente No. 1214
Col. Centro
Zacatecas, Zac. C.P.
Tel. (01-492) 275 61
Fax.(01-492) 275 61

RCA

POLIZA DE GARANTIA

Comercializadora Thomson de México S.A de C.V. garantiza este producto en todas sus partes y mano de obra, contra cualquier defecto de fabricación y funcionamiento, a partir de la fecha de entrega al cliente final. Bajo el siguiente término:

Producto	Partes	Mano de Obra
Televisores c/cinescopio de 36,6 cm. (14 pulgadas) y menores	2 años cinescopio. 1 año otras partes.	1 año
Televisores c/cinescopio de 48,3 cm (19 pulgadas) y mayores.	2 años cinescopio. 2 años otras partes.	2 años.
Televisión de Proyección	1 año	1 año
Videocaseteras	1 año	1 año
Videocámaras	1 año	1 año
Equipos de Audio	1 año	1 año
Reproductor de DVD	1 año	1 año
Accesorios	1 año	1 año

CONDICIONES

1. Para ser efectiva esta garantía se requiere presentar esta póliza y/o factura de compra, junto con el producto en cualquiera de nuestros Centros de Servicios Autorizados, (que se indican en la hoja anexa), o en el lugar donde fué adquirido.
2. Comercializadora Thomson de Mexico se compromete a reparar y/o reponer las piezas y componentes defectuosos sin cargo al consumidor, o en caso de que a criterio de dicha empresa no sea posible la reparación, cambiar por uno nuevo, exactamente del mismo modelo o su similar. Los gastos de transportación dentro de la red de servicios, que se deriven del cumplimiento de esta póliza de garantía, serán cubiertos por Comercializadora Thomson de México S.A de C.V.
3. Todos los productos deberán ser llevados a cualquier Centro de Servicio Autorizado, excepto los televisores con pantalla de 63,5 cm (25 pulgadas) o mas, los cuales serán reparados en el domicilio del cliente.
4. El tiempo de reparación en ningún caso será mayor a 30 días, contados a partir de la recepción del producto en el Centro de Servicio Autorizado.
5. Para la adquisición de partes y accesorios, contactar al 01-800-1117221 o acudir a Comercializadora Thomson de México, .

NOTAS:

En caso de extravío de la póliza, el consumidor debe recurrir a su distribuidor para su reposición, previa presentación de la factura o nota de compra.

Para su comodidad, solicite informes sobre la localización del Centro de Servicio Autorizado mas cercano a su domicilio, llamando al:

01-800-1117221

No. Poliza: _____

Comercializadora Thomson de México, S.A. de C.V.
Miguel de Cervantes Saavedra 57 Col. Ampliación Granada
C.P. 11529 Mexico D.F.
Telefono: (55)25 81 53 20 RFC: CTM-980723-KS5

DATOS DEL PRODUCTO

PRODUCTO: Sistema De Audio 5CD

MODELO: RS2602/RS2603 NO.DE SERIE: _____

DATOS DEL CLIENTE

EXPEDIDA A: _____

DIRECCION: _____

_____

NOMBRE: _____

DIRECCION: _____

_____

FECHA DE COMPRA: _____

SELLO Y FIRMA DEL VENDEDOR

ESTA GARANTIA NO TIENE VALIDEZ EN LOS SIGUIENTES CASOS

- Si el producto no ha sido operado de acuerdo con el instructivo de uso en español que acompaña al producto
- Si el producto ha sido utilizado en condiciones distintas a las normales y/o se hacen caso omiso de los cuidados y advertencias que se señalan en el manual de usuario
- Si el producto ha sido alterado, modificado o sufrido daños por causas ajenas a fabricante u ocasionadas por el consumidor
- Si se ha tratado de reparar el aparato por personas no autorizadas por Comercializadora Thomson de México